

Title:	How to use NUUO IP+ Software with <i>HIKvision</i> Devices				
Date:	9/13/2011	Version:	1.0	Pages	4
Product:	HIKvision IP Products				
Action Required:	Information Only				

Supported Hikvision Devices

General Information

Product Category	Product Series	Firmware Required	Recommended Firmware	Remark
IPC	Type B	Baseline Firmware	build 110426	
	Type C	Baseline Firmware	build 110301	
IP Speed dome	6 inch standard resolution	Baseline Firmware	build 091017	
	4 inch standard resolution	Baseline Firmware	Build 101008	
DVS	6100 series	Baseline Firmware	build 100908	

Model Details

IPC Type B

DS-2CD852MF-E ,
 DS-2CD862MF-E ,
 DS-2CD752MF-E
 DS-2CD752MF-FB
 DS-2CD752MF-FBH
 DS-2CD752MF-IFB
 DS-2CD752MF-IFBH
 DS-2CD762MF-FB
 DS-2CD762MF-FBH
 DS-2CD762MF-IFB
 DS-2CD762MF-IFBH

IPC Type C

DS-2CD7133-E
 DS-2CD7153-E

IP Speed Dome

4" standard resolution

DS-2DF1-401H
 DS-2DF1-402H

IP Speed Dome

6" standard resolution

DS-2DF1-601H
 DS-2DF1-602H
 DS-2DF1-603H
 DS-2DF1-604H
 DS-2DF1-605H
 DS-2DF1-606H
 DS-2DF1-607H
 DS-2DF1-611H
 DS-2DF1-612H
 DS-2DF1-613H

DS-2DF1-614H
 DS-2DF1-615H
 DS-2DF1-616H
 DS-2DF1-617H
 DS-2DM1-602H
 DS-2DM1-603H
 DS-2DM1-604H
 DS-2DM1-612H
 DS-2DM1-613H
 DS-2DM1-614H

DVS 61xx series

DS-6104HCI
 DS-6101HFI-SATA
 DS-6104HCI-SATA
 DS-6101HFI-IP

Title:	How to use NUUO IP+ Software with <i>HIKvision</i> Devices				
Date:	9/13/2011	Version:	1.0	Pages	4
Product:	HIKvision IP Products				
Action Required:	Information Only				

1. NUUO Software Version

The latest software version is recommended. NUUO_IP+_v3.4.1, with Device Pack 1.9 are used in this document.

2. How to Build a Simple Demo

Download NUUO software from NUUO's website. Run the installation file.



After installation, start NUUO main console with user name "admin" and default password "12345"




After login, click the "General Setting" button, and choose "Setting".




Title:	How to use NUUO IP+ Software with <i>Hikvision</i> Devices				
Date:	9/13/2011	Version:	1.0	Pages	4
Product:	HIKvision IP Products				
Action Required:	Information Only				


Go to “Camera” page, click the “Insert” button.

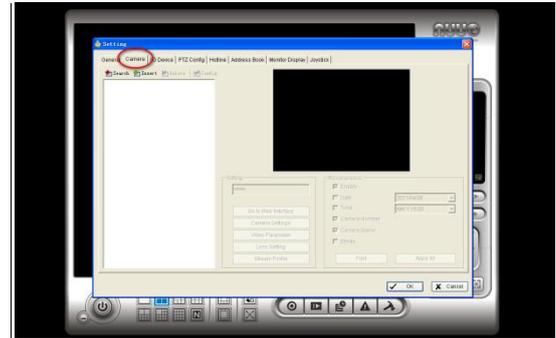


Add a camera by its IP address, http port user name, and password. Select “Hikvision” as the manufacturer, and select a model name from the list.

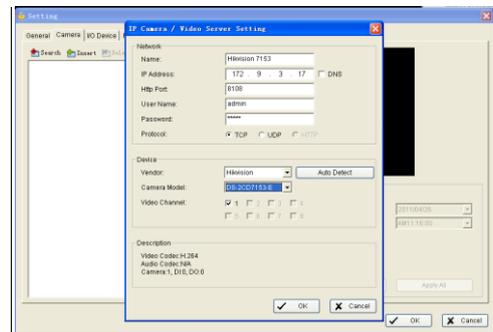

If the camera has been added successfully, the video will appear. Click the “Go to web interface” to open the Camera’s IE web client to setup the camera.

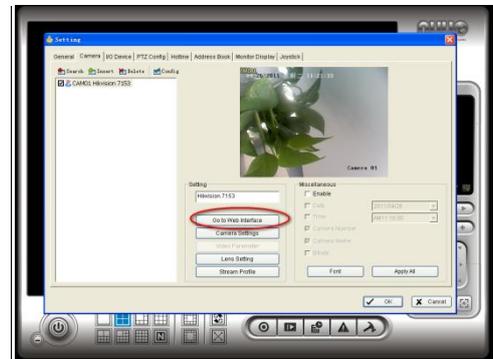

Then, click “Network Service” in “General Setting”.

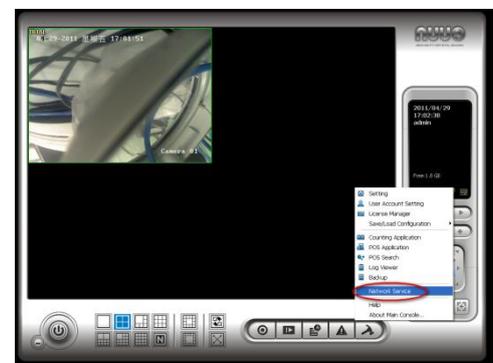


Title:	How to use NUUO IP+ Software with <i>HIKvision</i> Devices				
Date:	9/13/2011	Version:	1.0	Pages	4
Product:	HIKvision IP Products				
Action Required:	Information Only				

Start the Network Service manually.




Then, start "NUUO Remote Live Viewer". Click "General Settings", then choose "Setting"

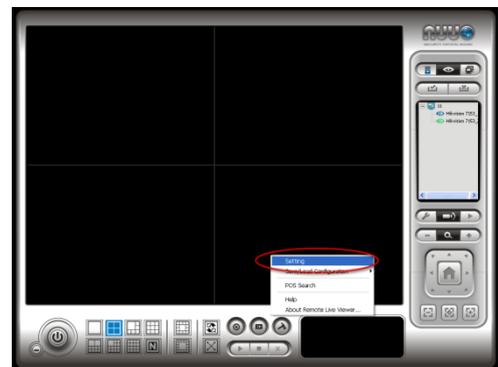

Go to "Server" page, add a Server by its IP address, user name and password. The IP address of the Server is the PC where "NUUO main console" is running.



Once the Server is connected, the camera list will be shown on NUUO Remote Live Viewer. Double click a camera icon to view it.

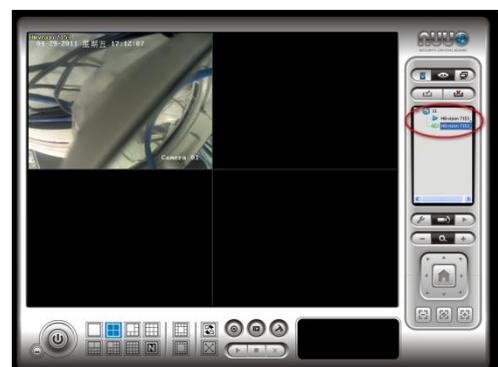

3. Known Issues

None.