

<b>Title:</b>	DS-PHA How to Upgrade Wired LCD Keypad by RS232 Cable	<b>Version:</b>	v1.0	<b>Date:</b>	12/16/2019
<b>Product:</b>	DS-PHA Series Hybrid Security Control Panel			<b>Page:</b>	1 of 6

## Preparation

---


1. Wired LCD Keypad DS-PK-L
2. RS232 serial port cable
3. Software SecureCRT and TFTP (/20 Alarm/Hikvision/11 Installation&How to/Tool/)
4. Firmware APS\_PKL\_EN\_STD\_V1.1.0\_build190727

## How to Upgrade Wired LCD Keypad by RS232 Cable

---

To support DS-PHA Series Hybrid Security Control Panel, the Wired LCD Keypad need upgrade to newest firmware upgraded by RS232 cable or Hybrid Security Control Panel website. This document is guiding you how to upgrad by RS232 cable.


- 1. Connect laptop USB port with Wireless Output Expander by RS232 cable.**

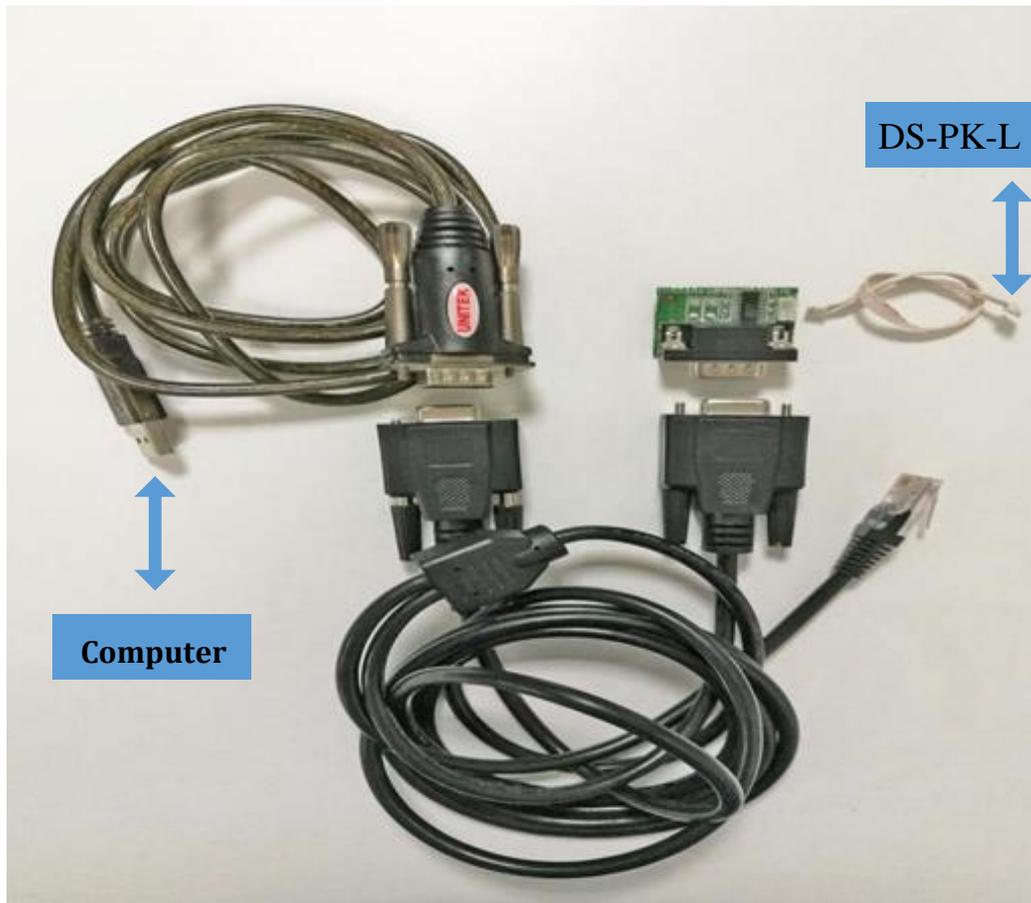

<b>Title:</b>	DS-PHA How to Upgrade Wired LCD Keypad by RS232 Cable	<b>Version:</b>	v1.0	<b>Date:</b>	12/16/2019
<b>Product:</b>	DS-PHA Series Hybrid Security Control Panel			<b>Page:</b>	2 of 6




## 2. Check the COM port in computer's device management.

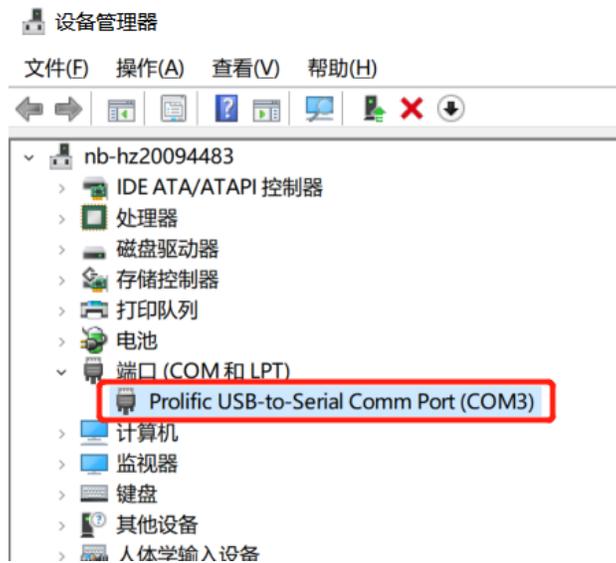

<b>Title:</b>	DS-PHA How to Upgrade Wired LCD Keypad by RS232 Cable	<b>Version:</b>	v1.0	<b>Date:</b>	12/16/2019
<b>Product:</b>	DS-PHA Series Hybrid Security Control Panel			<b>Page:</b>	3 of 6

### 3. Open SecureCRT and configure below parameters.

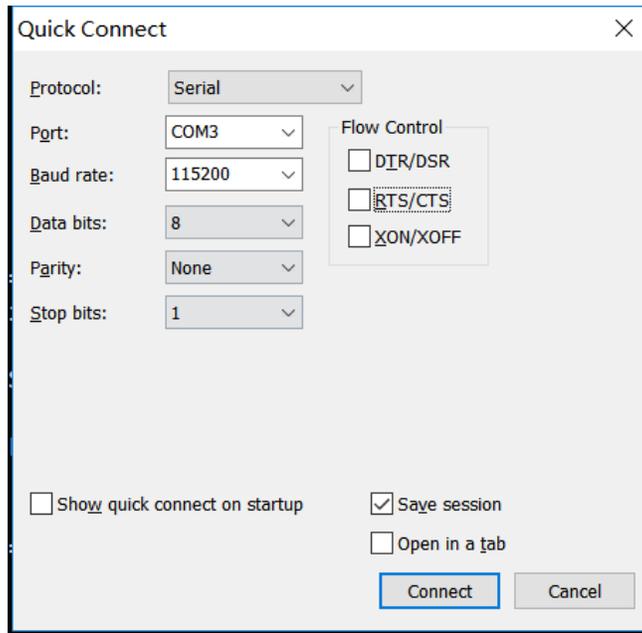

### 4. Press **U** within 5 seconds. And Input 1 for update firmware. It will show Waiting for the file to be sent:

```
=
=
=          VERSION: DS_PK_LRT VER1.1.0-2019.7.27          =
=
=          By Alarm Production Team                        =
=====
->
->
->
->uuuuuuuuuuPCB:9307
key addr:0
===== Admin Mode =====


===== Main Menu =====

Download Image To the STM32F0xx Flash And Update ---- 1
Execute The Old Program -----2
Erase Update Image Flag -----e
=====


Waiting for the file to be sent ... (press 'a' to abort) e
```

<b>Title:</b>	DS-PHA How to Upgrade Wired LCD Keypad by RS232 Cable	<b>Version:</b>	v1.0	<b>Date:</b>	12/16/2019
<b>Product:</b>	DS-PHA Series Hybrid Security Control Panel			<b>Page:</b>	4 of 6

## 5. Choose “Send Yodem” as shown in below image.

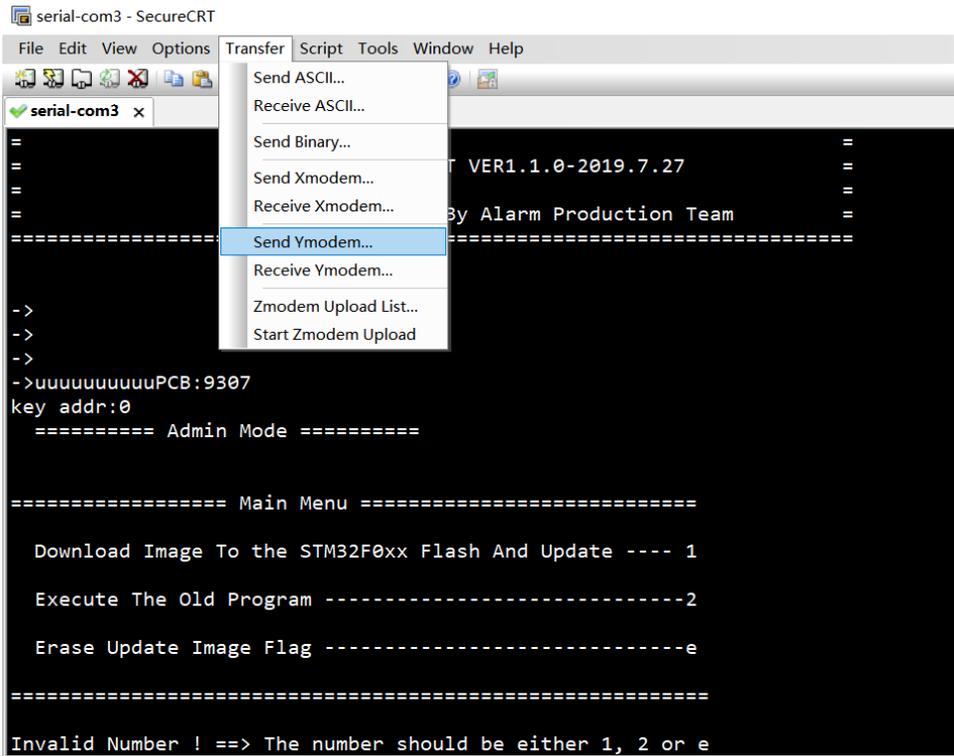

## 6. Choose Firmware and Add to transfer list, and Click OK to start transfer.

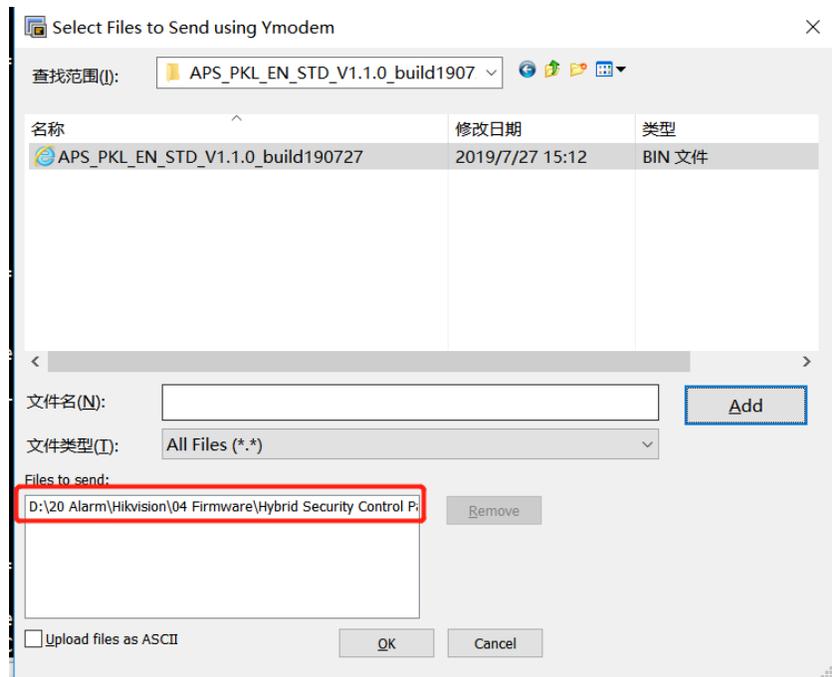

<b>Title:</b>	DS-PHA How to Upgrade Wired LCD Keypad by RS232 Cable	<b>Version:</b>	v1.0	<b>Date:</b>	12/16/2019
<b>Product:</b>	DS-PHA Series Hybrid Security Control Panel			<b>Page:</b>	5 of 6

**7. It will upgrade automatically after transfer finished. When showing **Newest Firmware Version**, means upgrade finished.**

```
Starting ymodem transfer. Press Ctrl+C to cancel.
 100%   200 KB   5 KB/s 00:00:36   0 Errors..

205484   Bytes
-----
                ADDR:0

LCD
mif
SI4460
868MHz
zone 0
relay 0
DS_PK_LRT

=====
= (C) COPYRIGHT 2019 Hangzhou Hikvision Digital Technology Co.,Ltd =
=                                     ALARM HOST                       =
=                                     VERSION: DS_PK_LRT VER1.1.0-2019.7.27 =
=                                     By Alarm Production Team           =
=====

ur
```



<b>Title:</b>	DS-PHA How to Upgrade Wired LCD Keypad by RS232 Cable	<b>Version:</b>	v1.0	<b>Date:</b>	12/16/2019
<b>Product:</b>	DS-PHA Series Hybrid Security Control Panel			<b>Page:</b>	6 of 6

**First Choice for Security Professionals**  
**HIKVISION Technical Support**